

EM80 PROXIMITY LONG RANGE READER

INTRODUCTION

The EM80 is an advanced reader for the popular EM4001 format 125KHz tags. It can be used on ISO card with Read range of over 70 cm. Its advanced features include auto-tuning, DSP capabilities to increase read range and to reduce unwanted vibration and interference. The EM80 supports RS232, Wiegand 26, and Wiegand 34 output formats. Furthermore, the reader is encapsulated for environmental protection. The EM80 provides solutions for long-range RF reader applications such as car parks and other hands free use.

FEATURES DESCRIPTION

The DSP (Digital Signal Processing) can be used to increase reading range of RFID cards, reduce vibration and electrical noise effects. As these effects are not eliminated, care should be taken to position the equipment away from sources of electrical noise and vibration. Temperature changes can also affect accuracy of the antenna tuning. The EM80 is equipped with a sophisticated self-tune facility or auto-tune. The reader performs an auto-tune shortly after power-up and thereafter every 10 minutes.

FEATURES

- Very Long Read Range
- Digital Signal Processing
- Remote Auto-Tuning
- Strong Water Resistant Enclosure

INSTALLATION

Position the EM80 away from sources of interference such as main wiring. Do not fix the reader antenna on solid steel objects or range loss will occur and the auto-tuning may even run out of range. Moderate metal fixtures are acceptable. Computer monitors used in DOS mode can result in powerful interference especially when older monitors are used. Vibration can also cause loss of range.


SPECIFICATIONS

Table 1. EM80 Operational & Physical Characteristics

| Parameter | Conditions |
|---------------------|--|
| Power Requirements | 12V DC |
| Current Consumption | 0.2 Amperes nominal |
| Frequency | 125 KHz |
| Read Range | Over 70 cm with ISO cards |
| Interfaces | RS232 (9600, n, 8, 1) and Wiegand26/34 |
| Transponder | Read-only 64 bits, Manchester encoded |
| Auto-tune | Internal upon switch-on and every 10 minutes |
| Read Indication | LED and RS232 connection |
| Dimensions | 240mm x 240mm x 48mm |
| Nominal Weight | 1.25 Kg |


DATA FORMATS

Output Data Structure – Wiegand 26

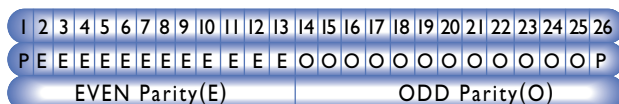

P=Parity Start Bit and Stop Bit

Dimension:

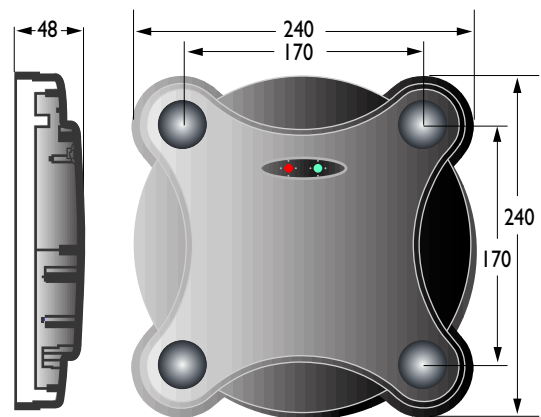

Output Data Structure – ASCII



Output Data Structure – Wiegand34



P = Parity start bit and stop bit

Report Format

Upon switch-on the reader sends a report via the RS232 line. The report indicates the Software Revision and the Tuning Variable. A typical report will be as follows (hex values):



The Tune Variable indicates the Tuning Capacity. A figure between 01h-0Dh is OK. A figure outside this range can be caused by environmental demands, possibly due to fixing directly onto sheet steel.

REFERENCE DATA

Table 2. Cable Signal Definitions

| Pin No. (internal) | Wire color | Signal | Description |
|--------------------|-------------|--------|-------------------------------------|
| 1 | Red | PWR | +12V DC input |
| 2 | Black | GND | Ground |
| 3 | NA(exposed) | Shield | Connect to Ground |
| 4 | Violet | Unused | Reserved for future use |
| 5 | Blue | RS232 | Serial RS232 output (9600, n, 8, 1) |
| 6 | Brown | Data 0 | Data 0 line for Wiegand output* |
| 7 | Green | Data 1 | Data 1 line for Wiegand output* |
| 8 | Orange | CP | Card Present |
| 9 | Yellow | PRGM | Program line (format selector) |

* Add 1.5k pull-up resistors for Data0 and Data1 signals

Table 3. Output Format Programming

| Output Formats | Programming |
|----------------|---|
| ORS232 | Connect PRGM (Yellow wire) to RS232 (Blue wire) |
| Wiegand26 | Connect PRGM (Yellow wire) to GND (Black wire) |
| Wiegand34 | Connect PRGM (Yellow wire) to PWR (Red wire) |